

Loading Arm

INNOVATIVE DESIGN FROM RACINE RAILROAD PRODUCTS



Powerful and Lightweight

The Loading Arm is used to check the spacing between the ball of the two rails under load. It is also used to pull the rail back to the proper specifications, holding the rail while the tie plate can be refastened to the tie.

For a complete list of specifications and machine options available, contact Racine Railroad Products, Inc. at: Tel (262) 637-9681 • Fax (262) 637-9069 • email: custserv@racinerailroad.com 1955 Norwood Court • Mount Pleasant, Wisconsin 53403



